

Photoelectric Smoke Alarm with Hush User Guide

10 Year Lithium battery, single station, 40°C temperature rating

Model: **OG1400**



Photoelectric smoke alarms are designed to detect visible particles (associated with slow smouldering fires). Home fires develop in different ways and are often unpredictable. For maximum protection against fast flaming fires and slow smouldering fires, both ionisation and photoelectric alarms should be installed.

ATTENTION: Please take a few minutes to thoroughly read this user guide which should be saved for future reference and passed on to any subsequent owner.

Ionisation sensing alarms may detect invisible fire particles (associated with fast flaming fires) sooner than photoelectric alarms. Photoelectric sensing alarms may detect visible fire particles (associated with slow smouldering fires) sooner than ionisation alarms. Home fires develop in different ways and are often unpredictable. For maximum protection, **Garland OnGard** recommends that both Ionisation and Photoelectric alarms be installed.

Contents of This User Guide

| | |
|---------------------------------|-------|
| Introduction..... | 2 |
| Installation Instructions | 3-9 |
| Operation | 10-11 |
| Maintenance..... | 12-13 |
| Fire Safety | 14-15 |
| Good Safety Habits..... | 16 |
| Warranty & Contact Details..... | 17-18 |

ENVIRONMENTAL PROTECTION

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with Local Authority or Supplier for recycling advice.

Introduction

Thank you for purchasing this smoke alarm. It is an important part of your family's home safety plan. You can trust **Garland OnGard** to provide the highest quality safety products.

Please take a few minutes to thoroughly read this user guide, and save it for future reference. Teach children how to respond to the alarms, and that they should never play with the unit.

Figures 1A to 2B will help you determine the correct location of safety products that will help make your home a safer place.

WARNING! Repeat 3 long beeps (ISO8201) indicates the particles of combustion have been detected.

WARNING! Removal of the smoke alarm battery will render the smoke alarm inoperative.

IMPORTANT! Read all instructions before installation and keep this manual near the alarm for future reference.

Before installing the smoke alarm, check the date is less than 10 years from the manufacture date. Please replace after 10 years from installation date and if no installation date is listed then replace after 10 years from the manufacturing date.

If you have any enquiries regarding this product please visit our website:
www.garlandcables.com.au

Installation Instructions

By law at least one smoke alarm must be installed on each level of your home (**Figure 1B**).

Recommended Locations

- In every room where someone sleeps with the door closed. The closed door may prevent an alarm located outside from waking the sleeper.
- In the immediate area of bedrooms and the exit path from all sleeping areas (**Figure 1A**).
- In stairways, as stairways act like chimneys for smoke and heat.
- In any room where large electrical appliances are operated (e.g. portable heaters or humidifiers).
- If a hallway or room is more than 9.1m long put alarms at both ends.
- For maximum household protection see **Figure 1C**.

Things to Consider

For Ceiling Mounting


Smoke from a fire will rise to the ceiling and spread horizontally. Mounting the smoke alarm in the centre of the ceiling places it closest to all points in the room.

- When mounting an alarm on the ceiling, locate it at a minimum of 30cm from the side wall (**Figure 2A**).
- For sloped, peaked or cathedral ceilings the alarm should be placed between 500mm and 1500mm from the highest point of the ceiling (**Figure 2B**).
- Smoke alarms in rooms with ceiling slopes greater than 1m in 8m horizontally, should be located on the high side of the room (**Figure 2B**).

For Wall Mounting

- When mounting the alarm on the wall, use an interior wall with the top edge of the alarm at a minimum of 10cm and a maximum of 30cm below the ceiling (**Figure 2A**).


Installation Instructions

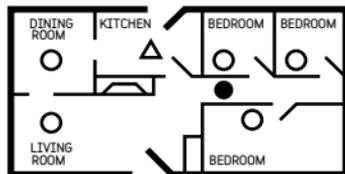

- Smoke Alarms for Minimum Protection
- Smoke Alarms for Additional Protection
- ▲ Ionisation Type Smoke Alarm with Alarm Silencer (Hush) or Photoelectric Type


SINGLE FLOOR PLAN

Figure 1A

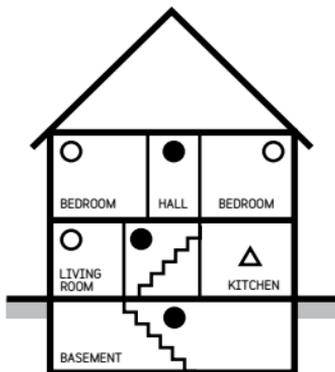

MULTIPLE FLOOR PLAN

Figure 1B

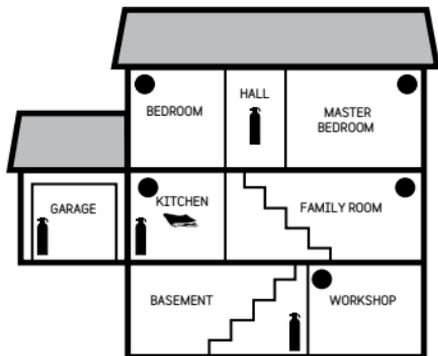


TOTAL HOME PROTECTION


Figure 1C

Installation Instructions

Figure 2A

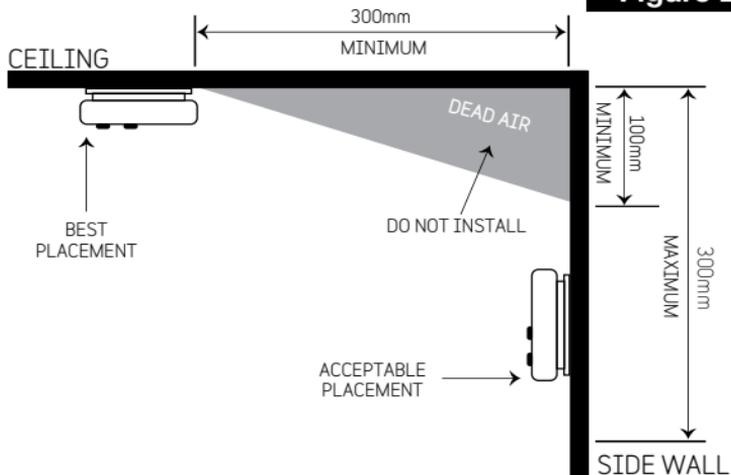

Installation Instructions

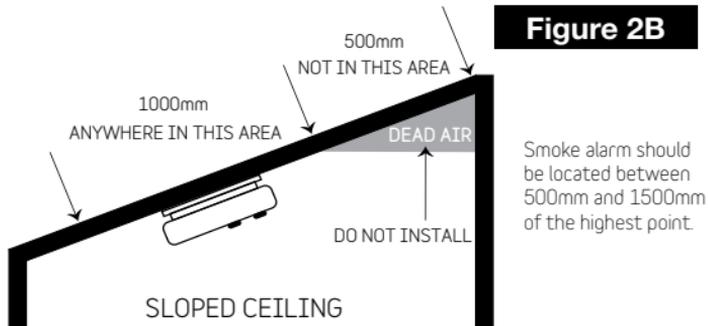

Mobile Home Installation

For Well Insulated Mobile Homes

Install smoke alarms as recommended on the previous pages.

In mobile homes that are not well insulated extreme heat or cold can be transferred from the outside to the inside through poorly insulated walls and roof. This may create a thermal barrier which can prevent the smoke from reaching an alarm mounted on the ceiling.

For Poorly Insulated Mobile Homes

Install the smoke alarm on an inside wall with the top edge of the alarm at a minimum of 10cm and a maximum of 30cm below the ceiling (**Figure 2A**).

For minimum protection, install at least one alarm close to the bedrooms.
For additional protection, see **Figure 1A**.

WARNING: TEST YOUR SMOKE ALARM OPERATION AFTER CARAVAN OR MOBILE HOME VEHICLE HAS BEEN IN STORAGE, BEFORE EACH TRIP AND AT LEAST ONCE A WEEK DURING USE

Installation Instructions


To minimise nuisance alarms avoid these locations:

- Do not install within 0.9m of the following: The door to a kitchen, or a bathroom that contains a tub or shower, forced air supply ducts used for heating or cooling, ceiling or whole house ventilating fans, or other high air-flow areas.
- Areas where curtains or other objects will block the sensor. Smoke must be able to reach the sensor to accurately detect conditions.
- Install at least 30cm away from fluorescent lights.
- Keep out of insect infested areas.
- Avoid excessively dusty, dirty or greasy areas.
- Do not install in areas where the temperature is colder than 0°C or hotter than 40°C.
- Do not install in areas where the relative humidity (RH) is greater than 93%.
- If a kitchen alarm is desired, it should have an alarm silencer feature or be a photoelectric type.
- Do not place in the garage.
- Avoid dead air spaces such as the peak of an “A” frame ceiling. “Dead Air” at the top may prevent smoke from reaching the alarm in time to provide early warning. Refer to **Figure 2A** and **2B**.

N.B. Smoke alarms are not to be used with detector guards unless the combination (alarm and guard) has been evaluated and found suitable for that purpose.


**CAUTION: THIS UNIT IS SEALED (INCLUDING THE BATTERY).
THE COVER IS NOT REMOVABLE!**

Figure 3A

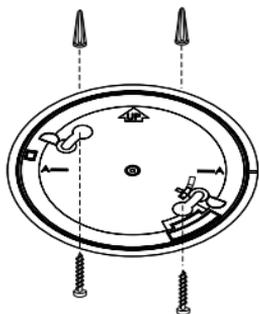

When mounting in a hallway, the “A” line should be parallel with the hallway.

Figure 3B

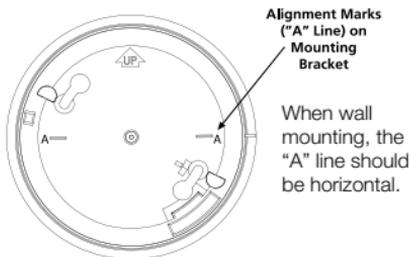

When wall mounting, the “A” line should be horizontal.

Installation Instructions

1. To ensure aesthetic alignment of the alarm with the hallway or wall, the “A” line on the mounting bracket should be parallel with the hallway when ceiling mounting or horizontal when wall mounting.
2. After selecting the proper smoke alarm location as described on Page 2, attach the mounting bracket to the ceiling as shown in **Figure 2A**. For wall mounting see **Figure 3A**. Place the mounting plate on the wall; be sure the “A” line is horizontal (parallel to the floor). Use the screws and cavity fixings provided to secure the mounting bracket (use 3/16” drill bit for cavity fixings.).
3. This alarm has a battery permanently sealed inside the alarm. No battery installation or maintenance is necessary.



Figure 3C

Note: Extensive cycling between high and low temperatures will significantly reduce battery life. Long term exposure to high temperatures will degrade the battery over time. Fire Knight recommends locating this alarm in a controlled temperature environment (20-30°C) for optimum life.

ACTIVATING THE ALARM

Once activated, the battery will supply power to the alarm or the life of the alarm (10 years). Ensure that the mounting bracket is mounted correctly before installing the alarm on the mounting bracket.

2. To activate the alarm, install the alarm on the mounting bracket (**Figure 3C**) and rotate the alarm clockwise (as indicated on the alarm cover) until the alarm snaps into place.

The alarm is now activated!

WARNING: Alarm will not operate if it is not fixed on mounting plate.

3. After installation/activation, test your alarm by depressing and holding down the Test button for a minimum of 1 second (or until the alarm sounds). This should sound the alarm. The alarm will sound at a low level to avoid discomfort. If the Test button is pressed for greater than 5 seconds, the alarm will sound at the full 85 decibels and may cause some discomfort.

Installation Instructions

TAMPER RESIST FEATURE

Smoke Alarm Tamper Resist Feature

- To make the smoke alarm tamper-resistant, a tamper resist feature has been provided. To activate this feature you must break out the tamper-resist posts on the mounting plate (**Figure 4A**). Use a small screwdriver.
- Using this feature will deter children and others from removing the alarm from the mounting plate. With the blocks removed, the tamper-resist feature will be activated when the alarm is installed on the mounting plate.
- The tamper-resist tab will have to be released in order to remove alarm from mounting plate. Using a tool (small screwdriver) push the tab away from the mounting plate (**Figure 4B**) and rotate the alarm anti-clockwise in the “OFF” direction.
- After re-installation, test the alarm by depressing and holding down the Test button for several seconds. This should sound the alarm.



Figure 4A



Figure 4B

TESTING

Test by pushing the Test/Hush button on the cover and holding it down for a minimum of 1 second (or until the alarm sounds). **Note:** the first test sequence will be at a lower volume.

Holding the Hush/Test button for longer than 5 seconds will result in the full 85 decibel sound output. This will sound the alarm if the electronic circuitry, horn, and battery are working. If no alarm sounds, the unit has a defective battery or other failure. **DO NOT use an open flame to test your alarm, you could damage the alarm or ignite combustible materials and start a structure fire.**

SMOKE SENSING CHAMBER OPERATION: This alarm will "chirp" every 30 seconds (with red LED flash at the same time) if it detects a problem with the smoke sensing chamber.

NOTE: WEEKLY TESTING IS REQUIRED. TEST THE ALARM WEEKLY TO ENSURE PROPER OPERATION. Erratic or low sound coming from your alarm may indicate a defective alarm, and it should be returned for service.

OPERATION:

The smoke alarm is operating once the alarm is activated (see "Activating the Alarm") and testing is complete. When products of combustion are sensed, the unit sounds a loud 85 db pulsating alarm until the air is cleared. If there is any question as to the cause of the alarm, it should be assumed that the alarm is due to an actual fire and the dwelling should be evacuated immediately.

HUSH CONTROL:

NOTE: Hush control and Test button are a single button. The Hush feature has the capability of temporarily desensitising the alarm circuit for approximately 10 minutes. This feature is to be used only when a known alarm condition, such as smoke from cooking, activates the alarm.

The smoke alarm is desensitised by pushing the Hush/Test button on the smoke alarm cover. The alarm will silence immediately, and the LED will flash every 10 seconds to signal that the alarm is in Hush mode. The smoke alarm will automatically reset after approximately 10 minutes.

Operation

The Hush feature can be used repeatedly until the air has been cleared of the condition causing the alarm. Pushing the Test/Reset button on the alarm will end the temporarily desensitised period.

NOTE: DENSE SMOKE WILL OVERRIDE THE HUSH CONTROL FEATURE.

CAUTION: BEFORE USING THE ALARM HUSH FEATURE, IDENTIFY THE SOURCE OF THE SMOKE AND BE CERTAIN A SAFE CONDITION EXISTS.

FLASHING LED LIGHT: This smoke alarm is equipped with a flashing red indicator light with the following modes of operation:

- The LED will flash every 60-70 seconds in the stand-by mode signifying that the alarm is receiving power.
- The LED will flash every 0.5 seconds when the alarm is sounding. The flashing LED and pulsating alarm will continue until the air is cleared.
- The LED will flash every 10 seconds while in Hush mode.
- The LED will flash twice every 30 seconds when the alarm is within 30 days of end of life.
- The LED will flash every 30 seconds (with a chirp every 60 seconds) when the alarm is at end of life (replace alarm immediately)
- The alarm will chirp every 30 seconds without an LED flash to indicate a fault condition with the processor of the alarm.

If your alarm regularly nuisance alarms (see ""Nuisance Alarms"") when cooking, this indicates the alarm may be mounted too close to the source e.g. kitchen. However, by pressing the Hush/Test button prior to cooking, you can desensitise the alarm for approximately 10 minutes.

Maintenance

Smoke alarms are designed to minimise nuisance alarms. Cigarette smoke will not normally set off the alarm.

Combustion particles from cooking may set off the alarm if the alarm is located close to the cooking area. Large quantities of combustible particles are generated from spills or when broiling. Using the fan on a range hood which vents to the outside (non-recirculating type) will also help remove these combustible products from the kitchen.

This model PFKSA-LB has a HUSH control that is extremely useful in areas prone to nuisance alarms. For more information refer to OPERATION AND TESTING" section.

If the alarm does sound, check for fires first. If a fire is discovered, get out and call the fire service. If no fire is present, check to see if one of the reasons listed on the Installation section, "To minimise nuisance alarms avoid these locations", may have caused the alarm.

WARNING! DO NOT ATTEMPT TO OPEN THE ALARM FOR ANY REASON!

NOTE: One Lithium-Ion battery, permanently sealed inside the alarm, powers this unit; no battery installation or replacement is necessary for the life of the alarm

BATTERY ACTIVATION AND DEACTIVATION

To activate the alarm, attach the alarm to the mounting bracket by rotating in the direction of the arrows on the cover, see ACTIVATING THE ALARM in the INSTALLATION section.

To deactivate the alarm remove the alarm from the mounting bracket by rotating the alarm in the direction indicated by the arrows on the cover of the alarm.

NOTE: TAMPER RESIST FEATURE in the INSTALLATION section explains how to remove alarm from base.

LOW BATTERY

This alarm has a low battery monitor circuit which will cause the alarm to "chirp" every 60 seconds (with a red LED flash every 30 seconds), for a minimum of 30 days, at the end of the life of the alarm to indicate that the alarm needs replacement. Prior to the low battery chirp the LED will flash twice every 30 seconds for a period of 30 days. The purpose of this is to alert the user that the alarm will be entering low-battery and allows the alarm to be changed at a time of convenience to the user (i.e. chirping can be avoided during unsociable hours).

CLEANING YOUR ALARM

YOUR ALARM SHOULD BE VACUUMED ONCE A MONTH

If the tamper resist feature has been activated you will need to follow the instructions on Page 8 to remove your alarm for maintenance.

To clean your alarm, remove it from the mounting bracket as outlined in the beginning of this section. You can clean the interior of your alarm (sensing chamber) by using compressed air or a vacuum cleaner hose and blowing or vacuuming through the openings around the perimeter of the alarm. The outside of the alarm can be wiped with a damp cloth.

After cleaning, re-install your alarm and test your alarm by using the test button. If cleaning does not restore the alarm to normal operation the alarm should be replaced.

Fire Safety

WARNING: Please read carefully and thoroughly.

- Australian Standard AS 1670.6 states the purpose of installing smoke alarms is to provide early warning of a potentially life threatening condition and provide the maximum possible exit time.
- Smoke alarms have sensing limitations. Ionisation sensing alarms may detect invisible fire particles (associated with fast flaming fires) sooner than photoelectric alarms. Photoelectric sensing alarms may detect visible fire particles (associated with slow smouldering fires) sooner than ionisation alarms. Home fires develop in different ways and are often unpredictable. For maximum protection, both ionisation and photoelectric alarms should be installed.
- A battery powered alarm must have a battery of the specified type, in good condition and installed properly.
- AC powered alarms (without battery backup) will not operate if the AC power has been cut off, such as by an electrical fire or an open fuse.
- Smoke alarms must be tested regularly to make sure the batteries and the alarm circuits are in good operating condition.
- Smoke alarms cannot provide an alarm if smoke does not reach the alarm. Therefore, smoke alarms may not sense fires starting in chimneys, walls, on roofs, on the other side of a closed door or on a different floor.
- If the alarm is located outside the bedroom or on a different floor, it may not wake up a sound sleeper.
- The use of alcohol or drugs may also impair one's ability to hear the smoke alarm. For maximum protection, a smoke alarm should be installed in each sleeping area on every level of a home.
- Although smoke alarms can help save lives by providing an early warning of a fire, they are not a substitute for an insurance policy. Home owners, landlords and tenants should have adequate insurance to protect their lives and property.

Fire Safety

NOTE: There are situations where a smoke alarm may not be effective enough to protect against fire. For instance:

- a. smoking in bed
- b. leaving children home alone
- c. cleaning with flammable liquids such as gasoline

IMPORTANT: This alarm is not designed to alert hearing impaired individuals.

Additional Information

Smoke Detection - Where required by applicable laws, codes, or standards for the specified occupancy, approved single and multiple-station smoke alarms shall be installed as follows:

- In all sleeping rooms with the exception: Smoke alarms shall not be required in sleeping rooms in existing one and two-family dwelling units.
- Outside of each separate sleeping area, in immediate vicinity of the sleeping rooms.
- On each level of the dwelling unit, including basements.
Exception: In existing one and two-family dwelling units, approved smoke alarms powered by batteries are permitted.

Smoke Detection

Are more smoke alarms desirable? The required number of smoke alarms might not provide reliable early warning protection for those areas separated by a door from the areas protected by the required smoke alarms. For this reason, it is recommended that the householder consider the use of additional smoke alarms for those areas for increased protection.

The additional areas include the basement, bedrooms, dining room, furnace room, utility room, and hallways not protected by the required smoke alarms.

Good Safety Habits

Develop and practice a plan of escape:

- Install and maintain Fire extinguishers on every level of the home and in the kitchen, basement and garage. Know how to use a fire extinguisher prior to an emergency.
- Current studies have shown smoke alarms may not awaken all sleeping individuals, and that it is the responsibility of individuals in the household that are capable of assisting others to provide assistance to those who may not be awakened by the alarm sound, or to those who may be incapable of safely evacuating the area unassisted.
- Make a floor plan indicating all doors and windows and at least two escape routes from each room. Second storey windows may need a rope or chain ladder.
- Have a family meeting and discuss your escape plan, showing everyone what to do in case of a fire.
- Determine a place outside your home where you can meet if a fire occurs.
- Familiarise everyone with the sound of the alarm and train them to leave your home when they hear it.
- Practice a fire drill at least every six months, including fire drills at night. Ensure that small children hear the alarm and wake when it sounds. They must wake up in order to execute the escape plan. Practice allows all occupants to test your plan before an emergency. You may not be able to reach your children. It is important they know what to do.

What to do when the Alarm Sounds

- Alert small children in the home.
- Leave immediately by your escape plan. Every second counts, so don't waste time getting dressed or picking up valuables.
- In leaving, don't open any inside door without first feeling its surface. If hot, or you see smoke seeping through cracks, don't open that door! Instead use your alternative exit.
- If the inside of the door is cool, place your shoulder against it, open it slightly and be ready to slam it shut if heat and smoke rush in.
- Stay close to the floor if the air is smoky. Breathe shallowly through a cloth, wet if possible.
- Once outside, go to your selected meeting place and make sure everyone is there.
- Call the fire brigade on 000 from your neighbour's home or a call box – not from yours.
- Don't return to your home until the fire officials say that it is all right to do so.
- There are situations where a smoke alarm may not be effective to protect against fire.

For instance:

- a) smoking in bed
- b) leaving children unsupervised
- c) cleaning with flammable liquids, such as gasoline
- d) fires where the victim is intimate with a flaming initiated fire; for example, when a person's clothes catch fire while cooking
- e) incendiary fires where the fire grows so rapidly that an occupant's egress is blocked even with properly located detectors

Installation Date:

Installer/Landlord:

Alarm Model(s):

Tel:

Warranty and Contact Details

TEN YEAR LIMITED WARRANTY

Warranty

Garland warrants to the original consumer purchaser (Customer) that each new smoke alarm will be free from defects in materials and workmanship under normal use for a period of 10 years from the date of purchase (Warranty Period). To the extent permitted by law, **Garland** agrees to repair or replace (at our discretion) any defective product, within the Warranty Period, on presentation of proof of purchase.

Australia warranty claims:

1. These Terms outline how the Company warrants our products for all Products purchased after 1 January 2011.
2. **Garland** warrants that all **Garland** Products (excluding Third Party Product) will operate in accordance with their published specifications for the duration of the Warranty Period.
3. Where the sale of Products is to electrical wholesale customers of **Garland**, no additional warranties are to be provided on behalf of **Garland** to end consumers.
4. The Australian Consumer Law (ACL) protects consumers by giving them certain rights relating to the purchase of goods and services.
5. If the Customer is a 'consumer' as the term is defined in the ACL:
 - 5.1 **Garland**'s Products come within guarantees that cannot be excluded under the ACL;
 - 5.2 The Customer is entitled to a replacement or refund for major failure and for compensation for other reasonably foreseeable loss or damage;
 - 5.3 The Customer is entitled to have the Products repaired or replaced if the Products fail to be of acceptable quality and the failure does not amount to a major failure.
6. In addition, the Customer must ensure that terms of a like nature are contained in any contract of sale or onsale of the Products to a Third Party purchaser.
7. The Customer indemnifies and holds **Garland** harmless from any claims or demands which are made as a result of their failure to comply with the requirements of this clause.
8. If the Customer makes a claim during the Warranty Period it will be handled as follows:
 - (a) In the case of **Garland** Products, where there is a defect in such Products, **Garland** will replace or repair the Products (at its discretion and cost).
 - (b) **Garland** will not be responsible for the cost of retrieving, removing, reinstalling, or retesting the Products to and from the location where the Products are located.
 - (c) All warranties for any Products repaired or replaced during the Warranty Period will expire at the same time as the original warranty of the Products that were repaired or replaced.

Warranty and Contact Details

Exclusions

Subject to non-excludable laws, this warranty does not cover:

- normal wear and tear to the product or parts
- batteries or other consumables included with this product (excluding sealed non replaceable battery models)
- damage to the product caused by or at the direction of the Customer, including through accident, misuse, abuse, lack of reasonable care, tampering or repair by uncertified or non-authorised personnel
- any product that has not been installed, operated or maintained in accordance with the manual or operating instructions provided with the product
- any damage caused by improper power input or improper cable connection
- any indirect, special or consequential loss or damage of any kind

Garland's total liability in relation to the products shall not exceed the purchase price paid for the products, regardless of the basis of the claim and whether or not arising due to or in connection with the supply.

To make a claim

If a defect in the product appears within the Warranty Period, you are entitled to submit a warranty claim by first visiting the **Garland** website address below and filling out the Return Form. On contacting **Garland** and providing the proof of purchase (The original number and date of invoice) you will be issued a Goods Return Authorisation (GRA) prior to you returning the product. When returning the product please ensure a copy of the GRA is included and the product is properly packaged so that no damage occurs in transit. Any postage and packaging expenses required to return the product to **Garland** will be at your cost, but you may be entitled to a refund of those postage and packaging expenses where there is a major or minor problem with the Products which entitles you to a repair or replacement.

If **Garland** elects to repair the product, please note that the products presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the products, where such parts are equivalent quality to the original.



This warranty is provided by:

Madison Technologies

149 Beaconsfield St, Silverwater NSW 2128

1800 66 99 99

www.garlandcables.com.au



onGuard